

| | | |
|----------------|-------|-----------------|
| Digital Camera | Casio | EX-Z850 |
| Digital Camera | Casio | EX-Z1200 |
| Digital Camera | Casio | EX-Z3 |
| Digital Camera | Casio | EX-Z30 |
| Digital Camera | Casio | EX-Z4 |
| Digital Camera | Casio | EX-Z40 |
| Digital Camera | Casio | EX-Z50 |
| Digital Camera | Casio | EX-Z500 |
| Digital Camera | Casio | EX-Z55 |
| Digital Camera | Casio | EX-Z57 |
| Digital Camera | Casio | EX-Z60 |
| Digital Camera | Casio | EX-Z600 |
| Digital Camera | Casio | EX-Z70 |
| Digital Camera | Casio | EX-Z700 |
| Digital Camera | Casio | EX-Z750 |
| Digital Camera | Casio | EX-Z1000 |
| Digital Camera | Casio | EX-V8 |
| Digital Camera | Casio | EX-V7 |
| Digital Camera | Casio | EX-M1 |
| Digital Camera | Casio | EX-M2 |
| Digital Camera | Casio | EX-M20 |
| Digital Camera | Casio | EX-P505 |
| Digital Camera | Casio | EX-P600 |
| Digital Camera | Casio | EX-P700 |
| Digital Camera | Casio | EX-S1 |
| Digital Camera | Casio | EX-S100 |
| Digital Camera | Casio | EX-S2 |
| Digital Camera | Casio | EX-S880 |
| Digital Camera | Casio | EX-S770 |
| Digital Camera | Casio | EX-S600 |
| Digital Camera | Casio | EX-S500 |
| Digital Camera | Casio | EX-S3 |
| Digital Camera | Casio | EX-S20 |
| Digital Camera | HP | PhotoSmart R927 |
| Digital Camera | Kodak | M853 |
| Digital Camera | Kodak | M863 |
| Digital Camera | Kodak | M873 |

| | | |
|----------------|-------|--------------------|
| Digital Camera | Kodak | M883 |
| Digital Camera | Kodak | M893 IS |
| Digital Camera | Kodak | P712 |
| Digital Camera | Kodak | P850 |
| Digital Camera | Kodak | M763 |
| Digital Camera | Kodak | M753 |
| Digital Camera | Kodak | M1093 IS |
| Digital Camera | Kodak | M1073 IS |
| Digital Camera | Kodak | M1063 |
| Digital Camera | Kodak | M1033 |
| Digital Camera | Kodak | LS755 |
| Digital Camera | Kodak | LS753 |
| Digital Camera | Kodak | LS743 |
| Digital Camera | Kodak | P880 |
| Digital Camera | Kodak | Photo Frame Dock |
| Digital Camera | Kodak | Z7590 |
| Digital Camera | Kodak | Z730 |
| Digital Camera | Kodak | V803 |
| Digital Camera | Kodak | V705 |
| Digital Camera | Kodak | V610 |
| Digital Camera | Kodak | V603 |
| Digital Camera | Kodak | V570 |
| Digital Camera | Kodak | V550 |
| Digital Camera | Kodak | V530 |
| Digital Camera | Kodak | V1273 |
| Digital Camera | Kodak | V1253 |
| Digital Camera | Kodak | V1233 |
| Digital Camera | Kodak | V1073 |
| Digital Camera | Kodak | V1003 |
| Digital Camera | Kodak | Photo Frame Dock 2 |
| Digital Camera | Kodak | Z760 |
| Digital Camera | Kodak | LS633 |
| Digital Camera | Kodak | Camera Dock 6000 |
| Digital Camera | Kodak | EasyShare m893 is |
| Digital Camera | Kodak | EasyShare M883 |
| Digital Camera | Kodak | EasyShare M873 |
| Digital Camera | Kodak | EasyShare M863 |

| | | |
|----------------|-------|----------------------------------|
| Digital Camera | Kodak | EasyShare M763 |
| Digital Camera | Kodak | EasyShare M1093 IS |
| Digital Camera | Kodak | EasyShare M1073 IS |
| Digital Camera | Kodak | EasyShare M1063 |
| Digital Camera | Kodak | EasyShare M1033 |
| Digital Camera | Kodak | DX7630 |
| Digital Camera | Kodak | DX7590 |
| Digital Camera | Kodak | DX7440 |
| Digital Camera | Kodak | DX6490 |
| Digital Camera | Kodak | DC4800 |
| Digital Camera | Kodak | Camera Dock Series 3 |
| Digital Camera | Kodak | EasyShare P712 |
| Digital Camera | Kodak | EasyShare V1003 |
| Digital Camera | Kodak | LS443 Camera Dock |
| Digital Camera | Kodak | LS443 |
| Digital Camera | Kodak | LS420 Camera Dock |
| Digital Camera | Kodak | EASYSHARE- ONE/6MP |
| Digital Camera | Kodak | EASYSHARE- ONE/4MP |
| Digital Camera | Kodak | EASYSHARE-ONE / 6 MP |
| Digital Camera | Kodak | EASYSHARE-ONE / 4 MP |
| Digital Camera | Kodak | EasyShare-One |
| Digital Camera | Kodak | EasyShare V803 |
| Digital Camera | Kodak | EasyShare V1073 |
| Digital Camera | Kodak | EasyShare V1233 |
| Digital Camera | Kodak | EasyShare V1253 |
| Digital Camera | Kodak | EasyShare V1273 |
| Digital Camera | Kodak | EasyShare V550 |
| Digital Camera | Kodak | EasyShare V603 |
| Digital Camera | Kodak | EasyShare V610 |
| Gaming | Sony | PSP |
| Gaming | Sony | PSP Slim |
| Gaming | Sony | PlayStation Portable Slim |
| Gaming | Sony | PlayStation Portable PSP 2001 |
| Gaming | Sony | PlayStation Portable |

| | | |
|--------------------|----------|---------------------------------------|
| GPS | Sony | Nav-U NV-U94T |
| GPS | Sony | Nav-U NV-U71T |
| GPS | Sony | Nav-U NV-U92T |
| GPS | Sony | Nav-U NV-U83T |
| GPS | Sony | Nav-U NV-U52 |
| GPS | Sony | Nav-U NV-U70 |
| GPS | Sony | Nav-U NV-U72T |
| GPS | Sony | Nav-U NV-U73T |
| GPS | Sony | Nav-U NV-U74T |
| GPS | Sony | Nav-U NV-U82 |
| GPS | TomTom | RIDER 2nd edition |
| GPS | TomTom | RIDER |
| GPS | TomTom | NAVIGATOR 6 |
| GPS | TomTom | NAVIGATOR 5 |
| GPS | TomTom | MOBILE 5 |
| GPS | TomTom | GO 910 |
| GPS | TomTom | GO 900 |
| GPS | TomTom | GO 710 |
| GPS | TomTom | GO 700 |
| GPS | TomTom | GO 510 |
| GPS | TomTom | GO 500 |
| GPS | TomTom | GO 300 |
| GPS | TomTom | GO |
| Mobile Phone / PDA | Sharp | Willcom WS0075H |
| Mobile Phone / PDA | Sharp | Willcom WS003SH |
| MP3 / MP4 | Creative | Zen Xtra |
| MP3 / MP4 | Creative | Zen Vision:M (requires SYNCH adapter) |
| MP3 / MP4 | Creative | Zen Touch |
| MP3 / MP4 | Creative | Zen POrtable Media Center |
| MP3 / MP4 | Creative | Zen PMC |
| MP3 / MP4 | Creative | Zen NX |
| MP3 / MP4 | Creative | Nomad Jukebox Zen Xtra |
| MP3 / MP4 | Creative | Nomad Jukebox Zen USB 2.0 |
| MP3 / MP4 | Creative | Nomad Jukebox Zen NX |

| | | |
|-----------|----------|-----------------------------------|
| MP3 / MP4 | Creative | Nomad Jukebox 3 |
| MP3 / MP4 | Creative | Nomad Jukebox 2 |
| MP3 / MP4 | Creative | MuVo2 Series |
| MP3 / MP4 | Creative | MuVo2 FM |
| MP3 / MP4 | Creative | MuVo 2 |
| MP3 / MP4 | iRiver | H340 |
| MP3 / MP4 | iRiver | H320 |
| MP3 / MP4 | Toshiba | Gigabeat S60 |
| MP3 / MP4 | Toshiba | Gigabeat S30 |
| MP3 / MP4 | Toshiba | gigabeat MEV30K |
| MP3 / MP4 | Toshiba | gigabeat MES60VK |
| MP3 / MP4 | Toshiba | gigabeat MES30VW |
| MP3 / MP4 | Toshiba | gigabeat MES30VK |
| MP3 / MP4 | Toshiba | gigabeat MEG-F60S |
| MP3 / MP4 | Toshiba | gigabeat MEG-F40S |
| MP3 / MP4 | Toshiba | gigabeat MEG-F10K |
| MP3 / MP4 | Toshiba | gigabeat MEG-F10L |
| MP3 / MP4 | Toshiba | gigabeat MEG-F10S |
| MP3 / MP4 | Toshiba | gigabeat MEG-F20K |
| MP3 / MP4 | Toshiba | gigabeat MEG-F20S |
| Other | Sony | Reader |
| Other | Sony | Reader Digital Book PRS-505/LC |
| Other | Sony | Reader Digital Book PRS-505/RC |
| Other | Sony | Reader Digital Book PRS-505/SC |