

# Your HTC Desire 610


## Inserting your nano SIM and microSD cards

**IMPORTANT: USE A STANDARD NANO SIM ONLY.**


Inserting a modified SIM may damage the card slot or cause the card to not fit properly.




1. Make sure your phone is off and facing down. Then open the slot cover with your thumb or finger.

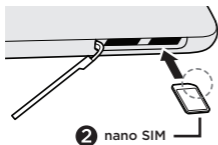

2. With your nano SIM card's gold contacts facing up and cut-off corner facing in, insert the nano SIM into the top slot and push it in until it clicks into place.

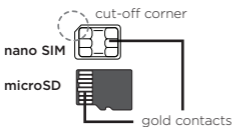

3. With your microSD™ card's gold contacts facing up, insert the microSD card into the bottom slot and push it all the way in.

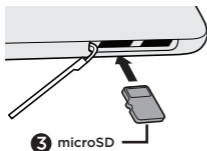

4. To close the slot cover, slide the plastic hinge into the side and press the cover until it clicks into place.

## Want some guidance on using your phone?

Check out our friendly walkthroughs in the **Tips & Help** app on your phone. Or go to [www.htc.com/support/](http://www.htc.com/support/) to find tutorials, the user guide, FAQs, latest news, and more.

© 2014 HTC Corporation. All rights reserved.

HTC, the HTC logo, and HTC Desire are trademarks of HTC Corporation.

microSD is a trademark of SD-3C LLC.

All other company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners.

[htc.com](http://htc.com)



91H0xxxx-xxM Rev.A